




INSTRUCTION

FANTASY2 WALK-IN Glass Panels

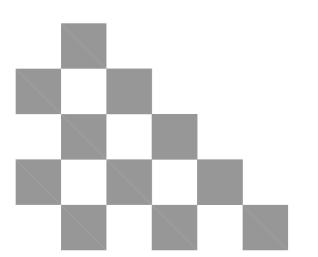

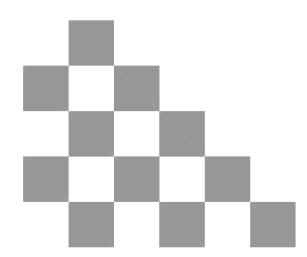




We appreciate your choosing of our shower products, and wish you a pleasant experience with our products and service. Please read Instruction carefully before installation.

IMPORTANT

Please check the shower enclosure for transport damage and completeness before installation. Complaints made by not-following installation cannot be accepted.

Please read carefully the following instructions before installing your shower enclosure to ensure safe and proper use and avoid any injury to either the installer or user .Failure to comply may invalidate your guarantee.

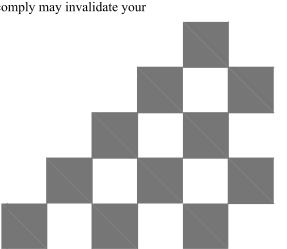





CARE INSTRUCTIONS


page 1


Shower enclosures should be cleaned after every use. To prevent limescale from building up, use a squeegee, a soft cloth or chamois leather-but no cleaning-to wipe off any water droplets left after showering. Residue left by bodycare products (liquid soap, shampoo, shower gel) can also cause substances to accumulate. Use water to rinse away residues after use. All sliding door track fittings should also be cleaned this way-to ensure that they continue run smoothly.


- Don't allow limescale to build up-especially in hard water areas
- If you do get a stubborn limescale build up,a mixture of 50:50 vinegar and water will help you to clean it away-but make sure all vinegar is rinsed off completely
- Never use strong detergents or cleaning agents
- Cleaning materials should wherever possible be rated between PH4 and PH8
- In no circumstances should you use any abrasive substance

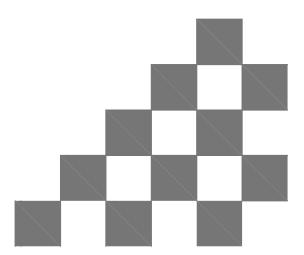


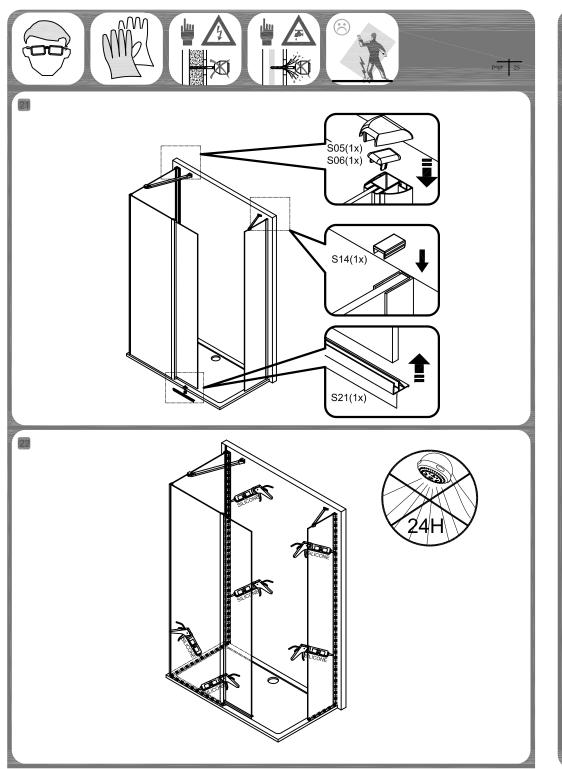


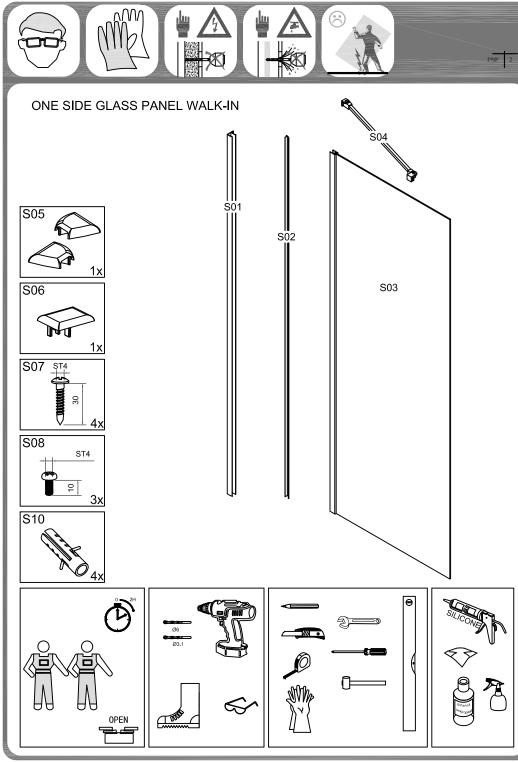

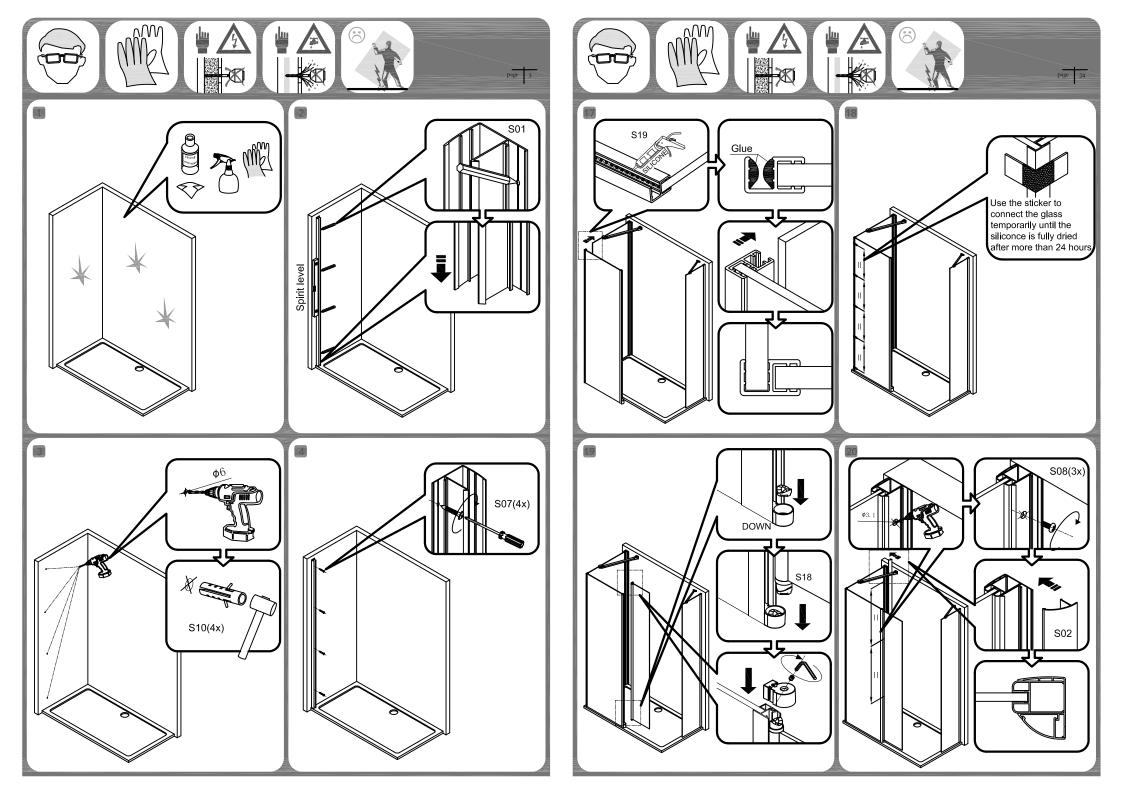

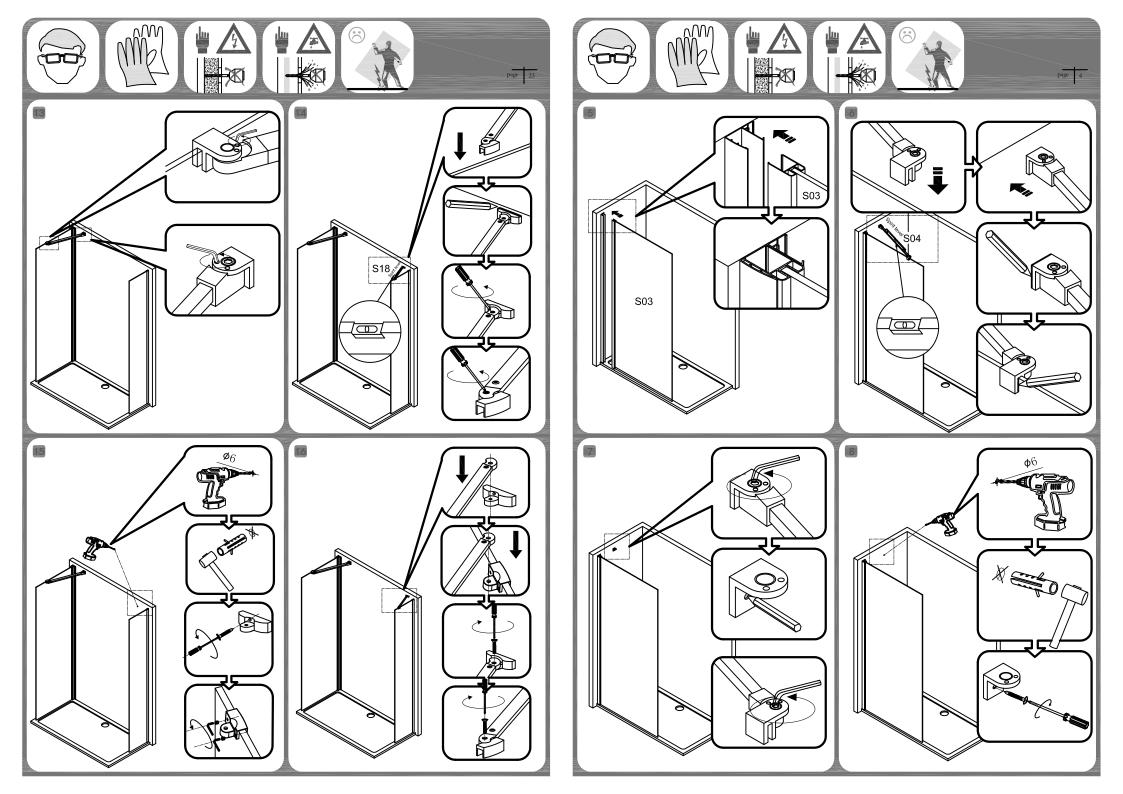

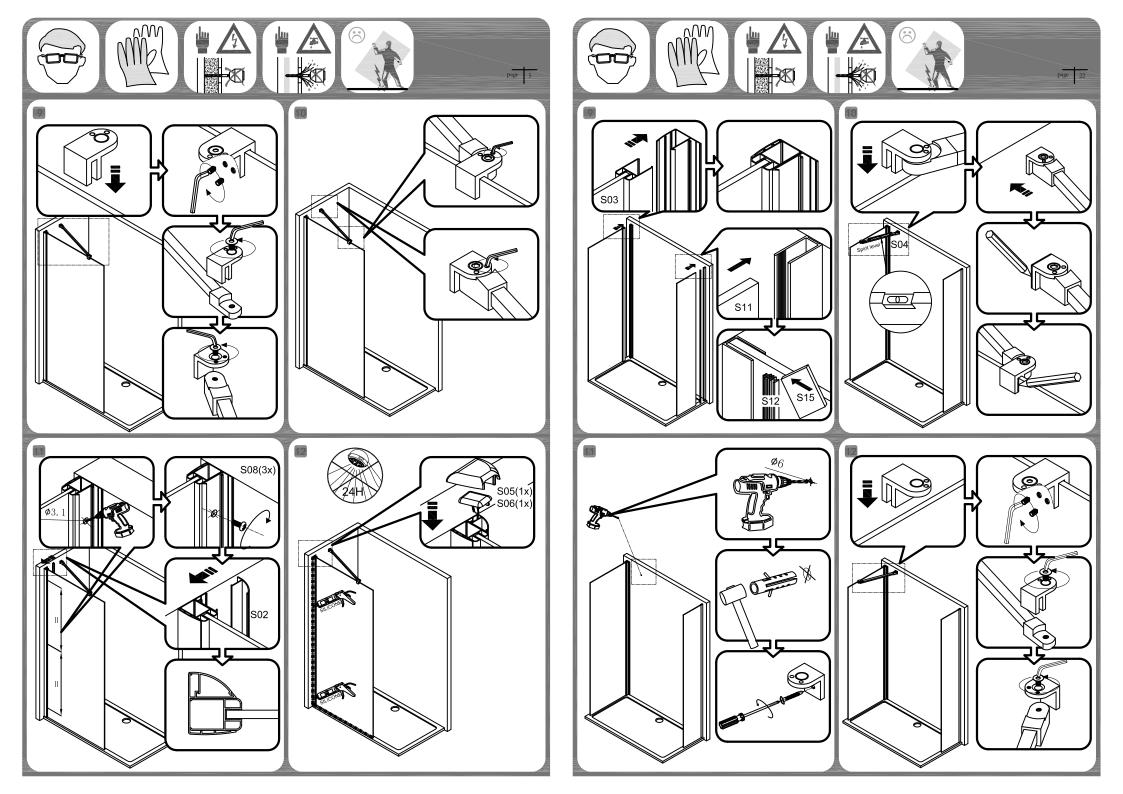


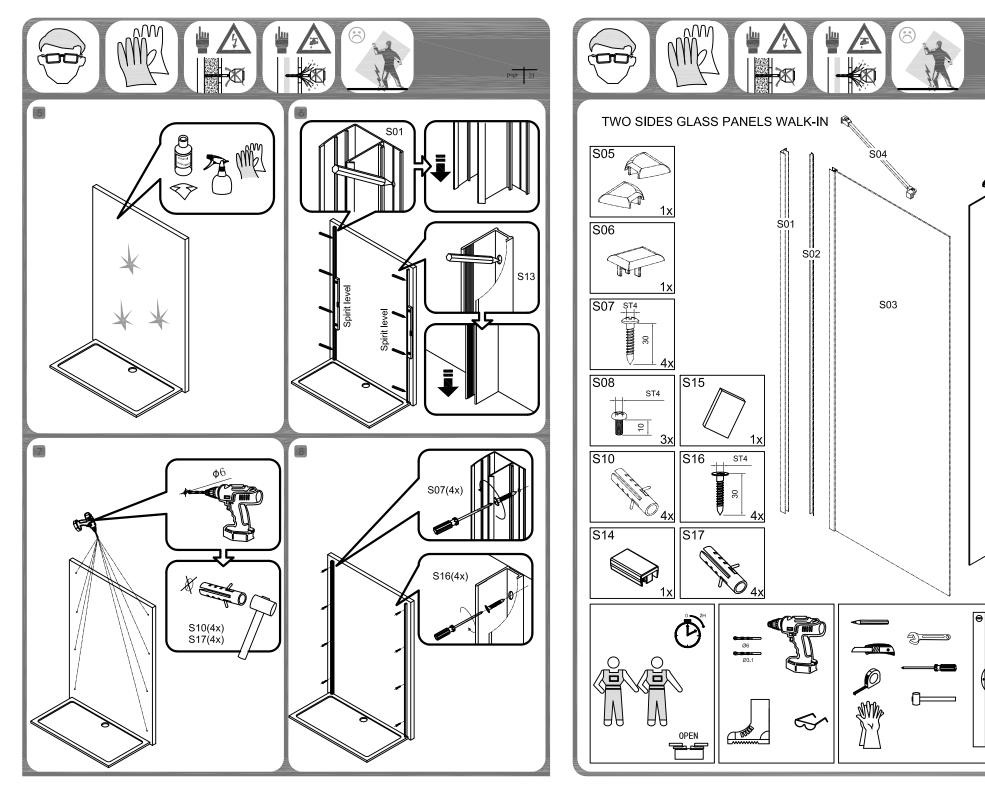



II S13


S12


S11

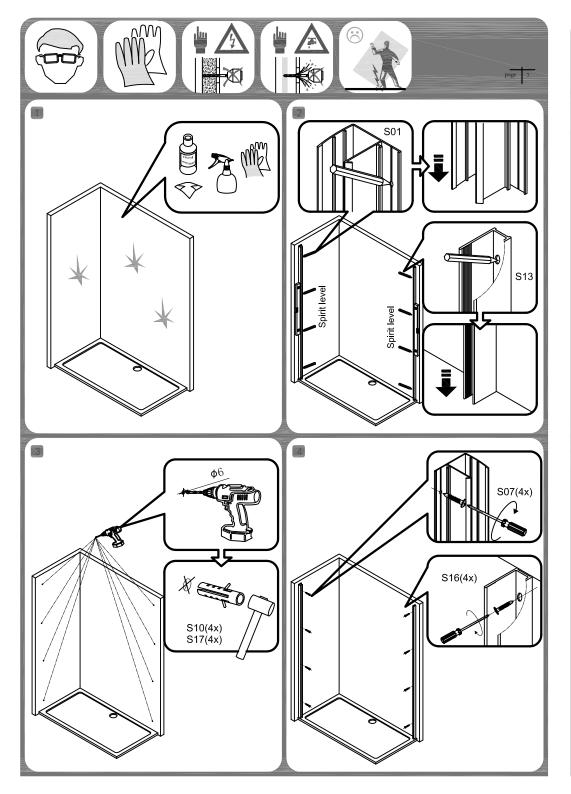

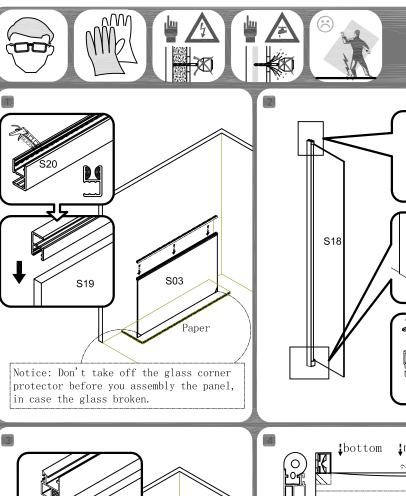

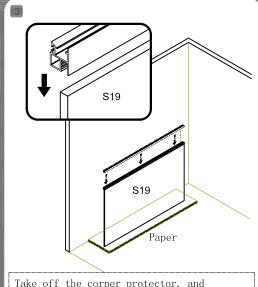









Put the glass on the ground, silicone the vertical profile on the glass, and press the middle part of the vertical profile and let the profile completely touch the glass; press slightly in the top and bottom part of the vertical profile, leave around 2mm space between the glass the vertical profile


After 24h drying, there should be enough space between vertical profile and pivot profile, and it won't touch each other when rotate the panel

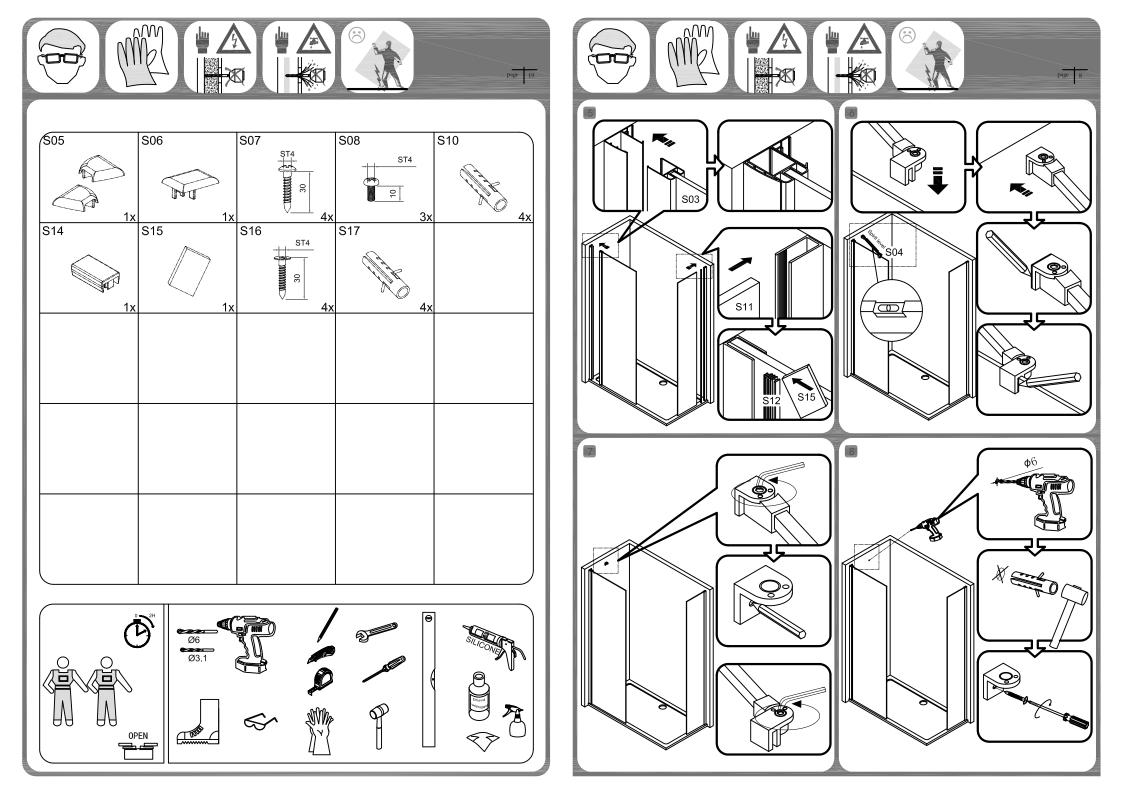


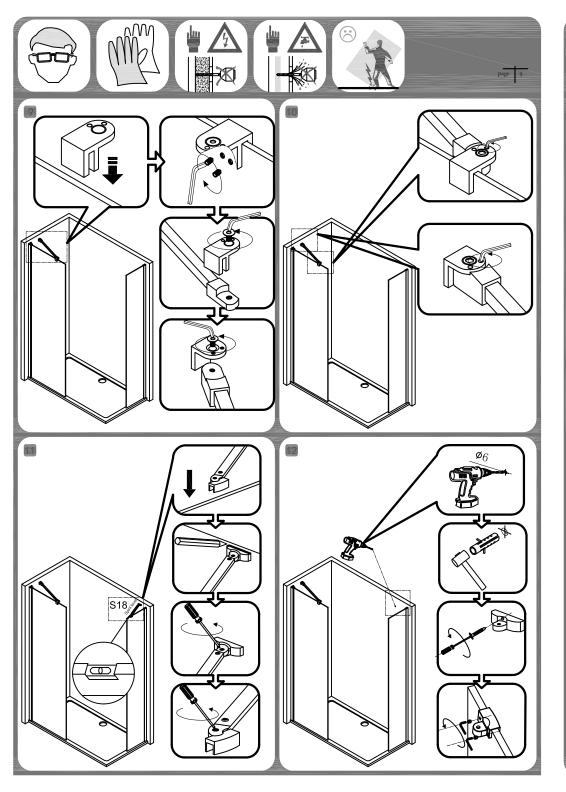


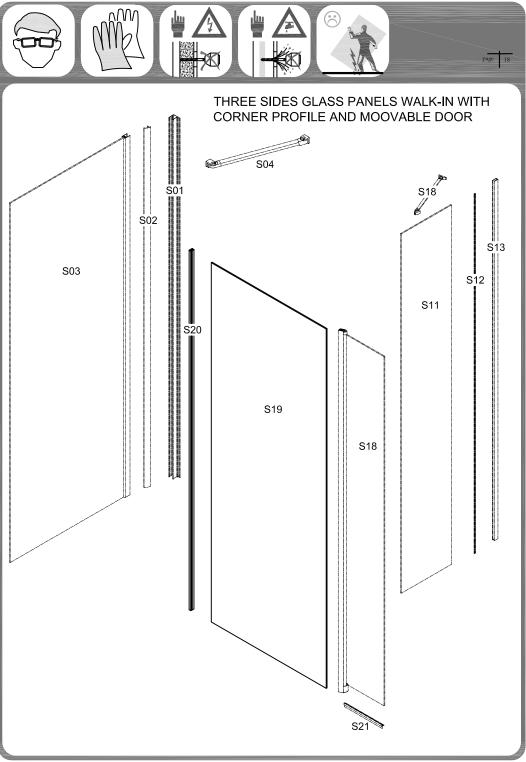


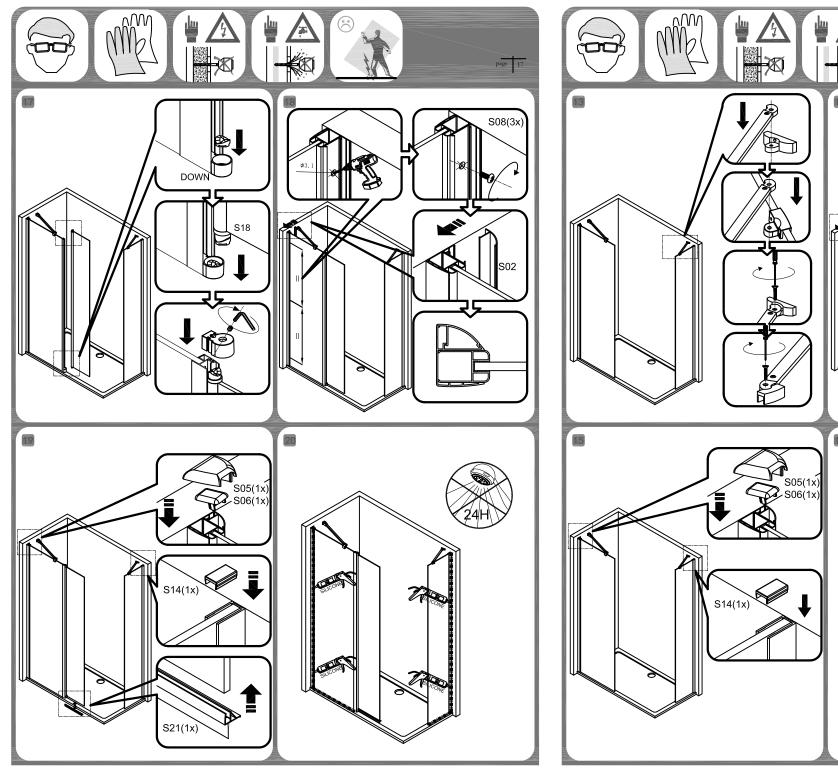


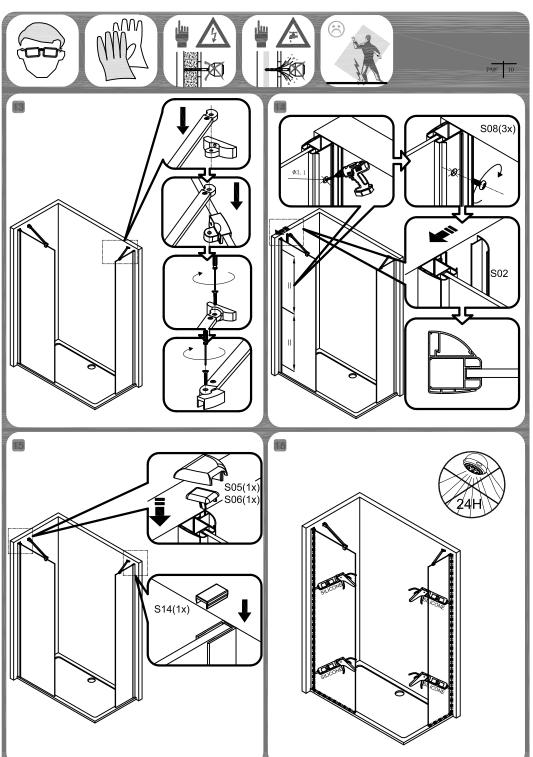


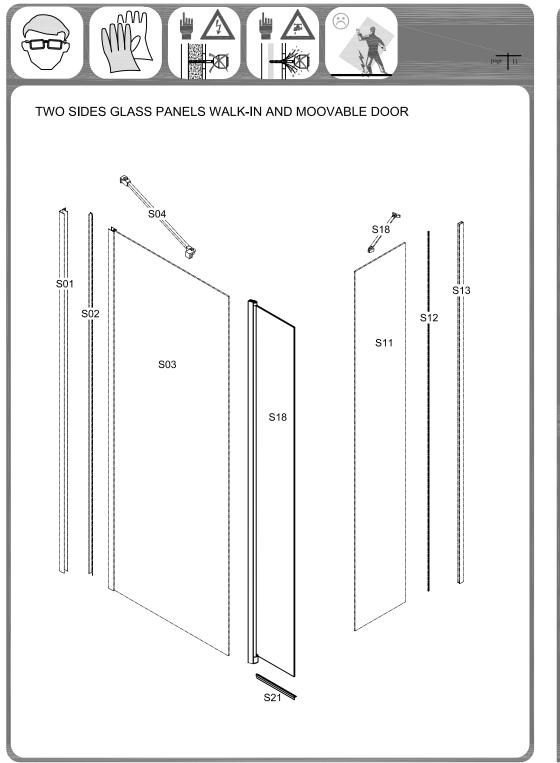


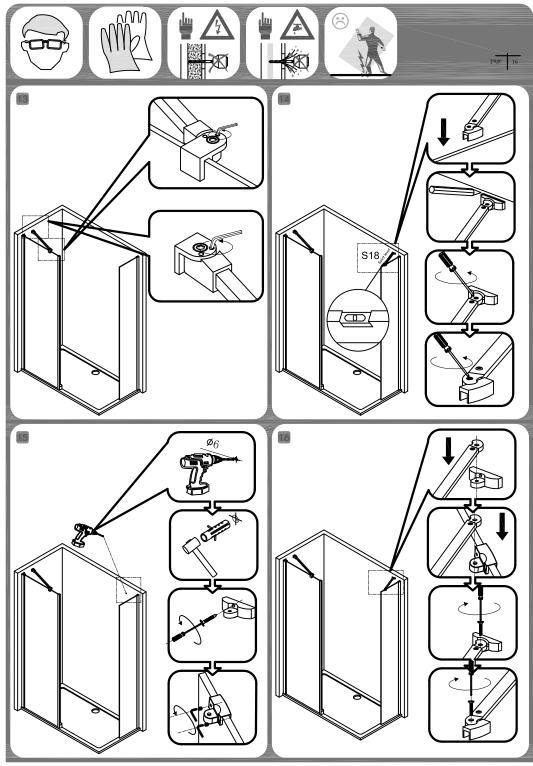


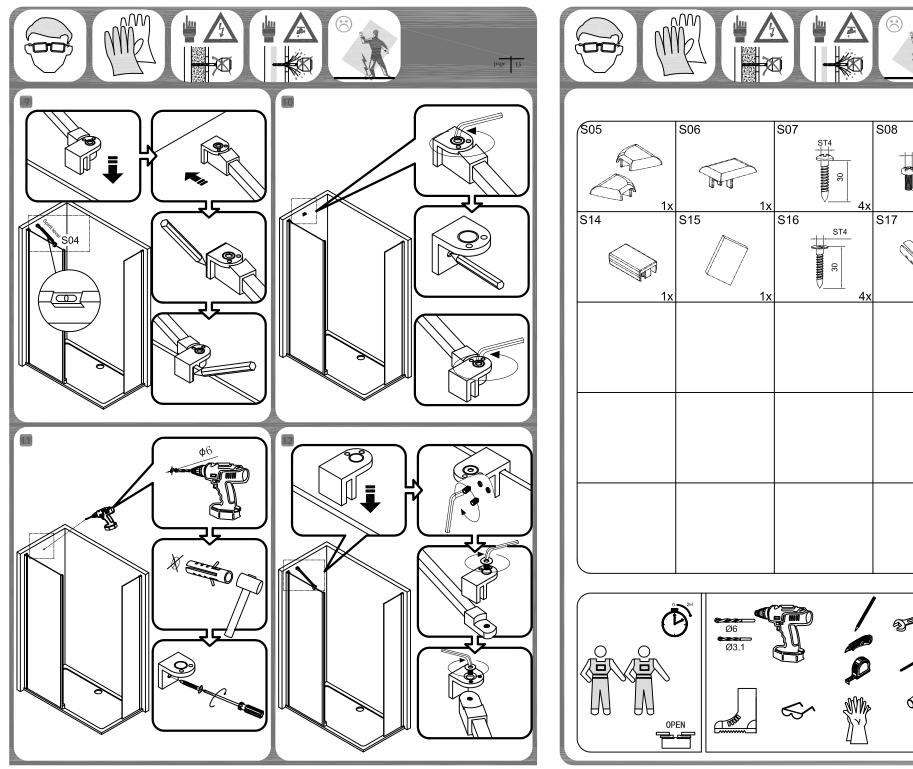

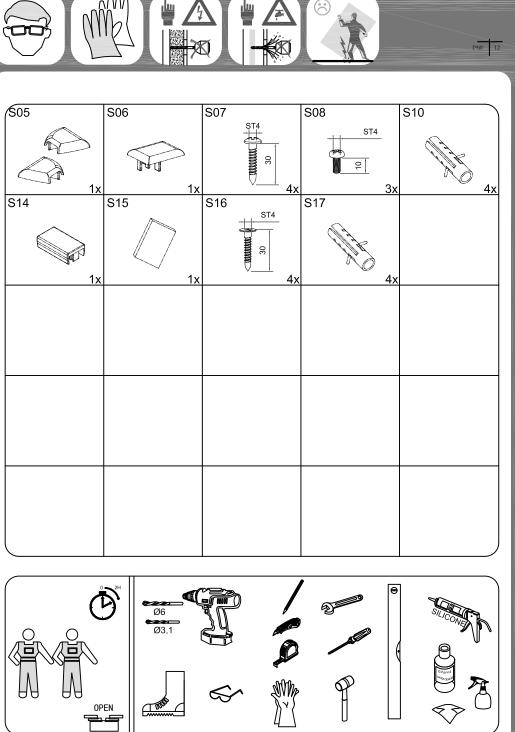




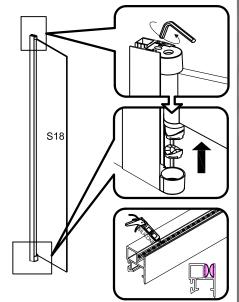

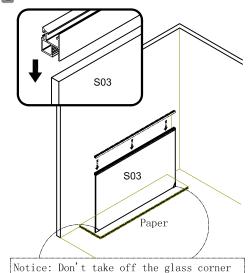

protector before you assembly the panel,

in case the glass broken.

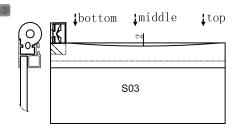

Put the glass on the ground, silicone the vertical profile on the glass, and press the middle part of the vertical profile and let the profile completely touch the glass; press slightly in the top and bottom part of the vertical profile, leave around 2mm space between the glass the vertical profile

After 24h drying, there should be enough space between vertical profile and pivot profile, and it won't touch each other when rotate the panel

